JVC

AV-28BH8EPB
AV-28BH8EPS

ENGLISH
FRANÇAIS
DEUTSCH
ITALIANO
CASTELLANO
NEDERLANDS
PORTUGUÊS

COLOUR TELEVISION — INSTRUCTIONS

TELEVISEUR COULEUR — MANUEL D'INSTRUCTIONS
FARBFERNSEHGERÄT — BEDIENUNGSANLEITUNG
TELEVISORE A COLORI — ISTRUZIONI
TELEVISOR A COLOR — MANUAL DE INSTRUCCIONES
KLEURENTELEVISIE — GEBRUIKSAANWIJZING
TELEVISOR A CORES — INSTRUÇÕES

Contents

Safety Precautions 1
Remote Control Buttons 2
Control Panel Buttons 3
Antenna Connections 3
Preparation 4
Before Switching on your TV 4
Power connection 4
Aerial Connections 4
How to connect the external equipments 4
Inserting batteries in the remote control handset 4
Switching the TV ON/OFF 4
To switch the TV on 4
To switch the TV off 4
Initial Settings 4
Operating with the onset buttons 5
Operating with Remote Control 5
Menu System 5
Sound Menu 5
Picture Menu 6
Feature Menu 7
Installation Menu 7
Other Features 10
Sound Mute 10
Stereo / Bilingual 10
Information on Screen 10
VCR / DVD Control Buttons and VCR / ▤ / DVD Switch 10
Teletext 10
To operate Teletext 10
To select a page of Teletext 11
To Select Index Page 11
Searching for a teletext page while watching TV 11
To Select Double Height Text 11
To Reveal "concealed" Information 11
To Stop Automatic Page Change 11
To Select a Subcode Page 11
To exit Teletext 11
Fastext and Toptext 11
Connect the External Equipments 12
Via the Euroconnector 13
EXT 2 S Mode 13
Via the RCA jacks 13
Via the ANT (aerial) socket 13
TV and Video Recoder (VCR) 13
NTSC Playback 13
Copy Facility 13
Connecting Headphones 13
Tips 13
Specifications 14

Safety Precautions

1. Power Source

The receiver should be operated only from a **220-240V AC, 50 Hz.** outlet. Ensure you select the correct voltage setting for your convenience.

2. Power Cord

The power supply cord should be placed so that they are not likely to be walked on or pinched by items placed upon them or against them. Pay particular attention to cord where they enter the plug, power outlet, and the point where they exit from the receiver.

3. Moisture and Water

Do not use this equipment in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this equipment to rain or water and do not place objects filled with liquids on it as this may be dangerous.

4. Cleaning

Before cleaning, unplug the receiver from the main supply outlet. Do not use liquid or aerosol cleaners. Use with soft and dry cloth.

5. Ventilation

The slots and openings on the receiver are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

6. Lightning

In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.

7. Replacement Part

When replacement parts are required, be sure the service technician has used replacement parts which are specified by the manufacturer or have the same specifications as the original one. Unauthorized substitutions may result in fire, electrical shock, or other hazards.

8. Servicing

Please refer all servicing to qualified personnel. Do not remove cover as this may result in electric shock.

9. Flame sources

Do not place naked flame sources on the apparatus.

10. Stand-By

Do not leave your TV stand-by or operating condition when you leave your house.

Warning!

Any intervention contrary to regulations, in particular, any modification of high voltage or a replacement of the picture tube may lead to an increased concentration of x-rays. Any television modified in this way no longer complies with license and must not be operated.

Instructions for waste disposal:

Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.

Remote Control Buttons

① ⏻/I = Stand By / Power
② **0 - 9** = Direct Program
③ Colour Buttons
④ Standard Button
⑤ ▲ (P∧) = Programme Up (Cursor Up)
⑥ **MENU** = Menu Button
⑦ ▶ (◀+) = Cursor Right / Volume +
⑧ Teletext / VCR /DVD Control Buttons
⑨ VCR DVD = VCR / ▤ / DVD Switch
⑩ I/II = Stereo / Bilingual Button
⑪ = Information Button
⑫ ▼ (P∨) = Programme Down (Cursor Down)
⑬ ◀ (◀−) = Cursor Left / Volume -
⑭ **AV** = AV Button
⑮ ▤ = Teletext Button
⑯ = Mute

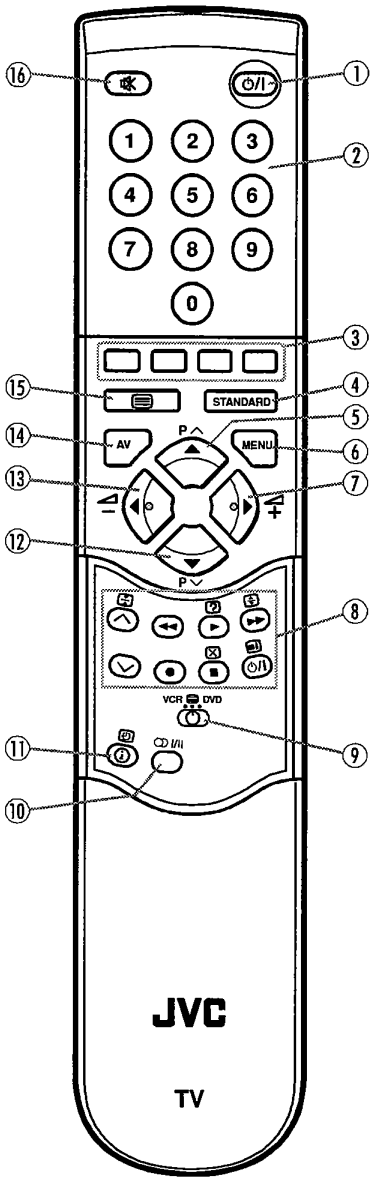

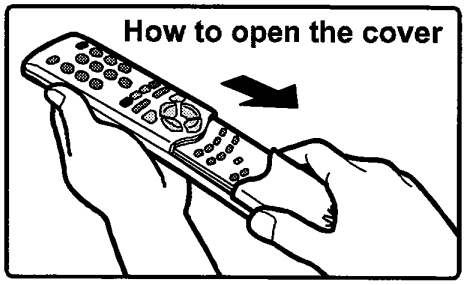

CAUTION
RISK OF ELECTRIC SHOCK

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock of persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Control Panel Buttons

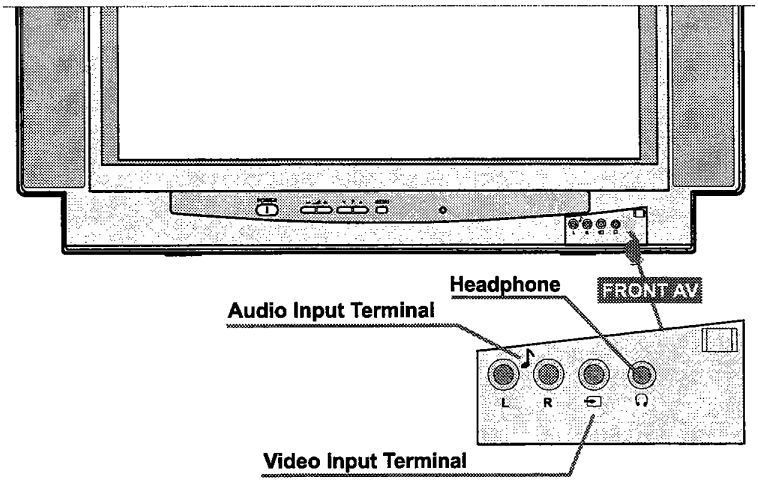

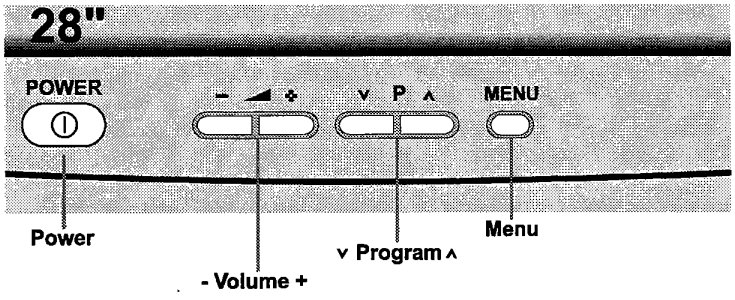

Antenna Connections

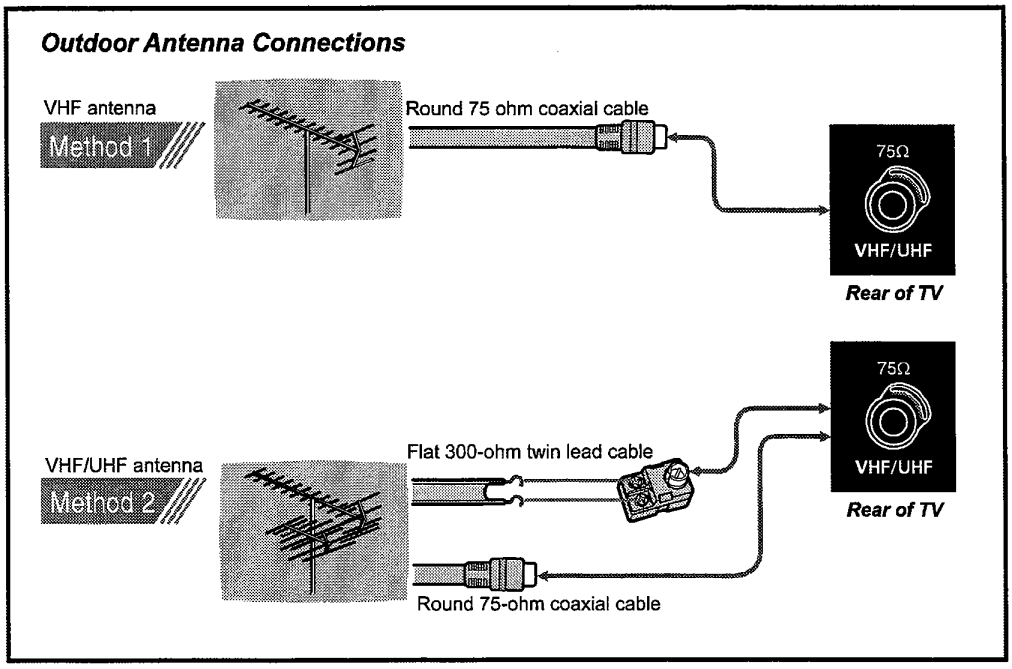

Preparation

Place TV on a solid surface.

For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

Before Switching on your TV

Power connection

Important: The TV set is designed to operate on **220-240 V AC, 50 Hz.**

- After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.

Aerial Connections

- Connect the aerial plug to the aerial input socket located at the back of the TV.

How to connect the external equipments

See "**Connect the External Equipments**" on **page 12**.

- See the instruction manuals provided with the external devices too.

Inserting batteries in the remote control handset

- Remove the battery cover located on the back of the handset by gently pulling upwards from the indicated part.
- Insert two **AAA (R03)** or equivalent type batteries inside.
- Replace the battery cover.

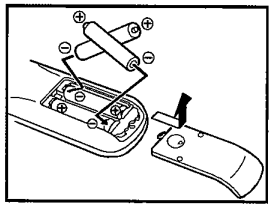

NOTE: Remove batteries from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries.

Switching the TV ON/OFF

You can operate your TV either using the remote control handset or directly using the TV onset buttons.

To switch the TV on

Your TV will switch on in two steps:

1- Press the power button located on the front of the TV. Then the TV switches itself to standby mode and the **RED LED** located below the TV turns on.

2- To switch on the TV from stand-by mode either:

Press a digit button on the remote control so that a programme number is selected,

or,

Press Standby / Power Button or Programme Up and Down buttons on the front of the TV or on the remote control respectively, so the TV will switch on and the **RED** Led will turn **GREEN**.

IMPORTANT:

- *If no aerial signal is received at the selected program for a period of 5 minutes then your TV automatically switches into stand-by mode.*

To switch the TV off

- Press the stand-by button on the remote control, so the TV will switch to stand-by mode and the **GREEN LED** will become **RED**, or,
- Press the power button located on the front of the TV.

NOTE: If you have switched of the TV set from the power button instead of the remote control, next time you press the power button, the TV set will switch on without going to the stand-by mode.

Initial Settings

When the TV is first turned on, it enters the initial setting mode, and the **AUTOSTORE** menu is displayed. Follow the instructions below to do the initial settings.

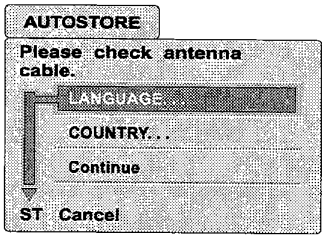

- The **AUTOSTORE** menu does not appear when your TV has been turned on once. In this case, use the **"LANGUAGE"**, **"COUNTRY"** and **"AUTOSTORE"** items in the **INSTALL** menu to make the initial settings. For details, see **"Installation Menu"** on **page 7**.
- If you want to do the initial settings later, press **STANDARD** button to turn the menu off.

1. Press **"P ∧"** or **"P ∨"** button to select **"LANGUAGE"** item. Then press the "◀" or "▶" button to enter the **"LANGUAGE"** sub-menu.

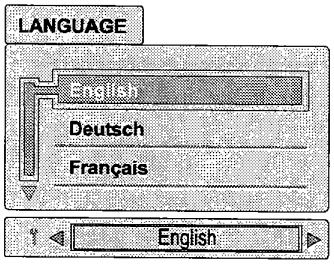

2. Press **"P ∧"** or **"P ∨"** button to select a language. Then press the "◀" or "▶" button to store it.

3. Press the **MENU** button to return to the **AUTOSTORE** menu.

4. Press **"P ∧"** or **"P ∨"** button to select **"COUNTRY"** item. Then press the "◀" or "▶" button to enter the **"COUNTRY"** sub-menu.

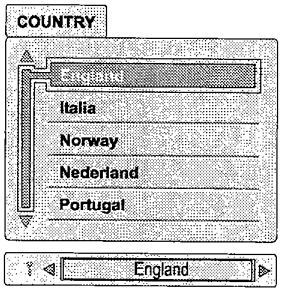

5. Press "**P** ∧" or "**P** ∨" button to select the country where you are now located. Then press the "◀" or "▶" button to store it.
6. Press the **MENU** button to return to the **AUTOSTORE** menu.
7. Press "**P** ∧" or "**P** ∨" button to select "**Continue**" item. Then press "▶" button to start the **AUTOSTORE** function.

   The **AUTOSTORE** function automatically stores the received channels in your TV's programme numbers.

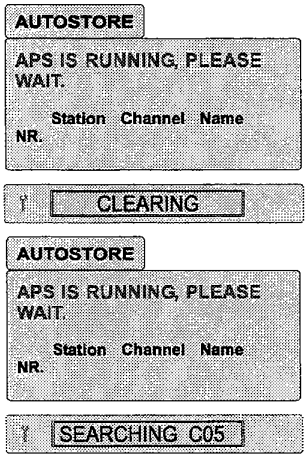

   After the **AUTOSTORE** function is finalized, "**PROGRAM**" menu appears. You can delete a channel or swap two channel numbers. For details, see "**Program Menu**" on **page 9**.
8. Press the **STANDARD** button to complete the initial settings.

   If a channel you want to view is not stored, store it using the **TUNING** menu. For details, see "**Tuning Menu**" on **page 8**.

Operating with the onset buttons

Volume setting and programme selection can be made using the buttons on the front panel.

Volume Setting

• Press "- ◢" button to decrease volume or "◢ +" button to increase volume, so a volume level scale will be displayed on the screen.

Programme Selecting

• Press "**P** ∧" button to select next programme or "∨ **P**" button to select the previous programme.

Entering Main Menu

• Press "**MENU**" button to enter main menu. In the main menu select submenu using "**P** ∧" or "∨ **P**" button and enter the submenu using "◢ +" or "- ◢" button. To learn the usage of the menus, refer to the **Menu System** section of this manual.

Operating with Remote Control

The remote control handset of your TV is designed to control all the functions of the model you selected. The functions will be described in accordance with the menu system of your TV.

Functions which you can use out of menu system are described below.

Volume Setting

Press "+" button to increase volume.

Press "−" button to decrease volume.

Programme Selecting
(Previous or next programme)

• Press "**P** ∨" button to select the previous programme.
• Press "**P** ∧" button to select the next programme.

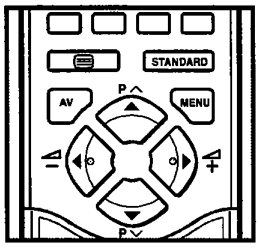

Programme Selecting (direct access):

Press digit buttons on the remote control handset to select programmes between 0 and 9. TV will switch to the selected program after a short delay.

• For a two or three digit program number enter the second or third digit after pressing the first digit within 2 seconds.

Menu System

Your TV has been designed with a menu system. Display **"MENU"** (main menu) and enter one of four menus **(SOUND, PICTURE, INSTALL and FEATURE)**.

1- Press **"MENU"** button to display **"MENU"** (main menu). The menu titles will be displayed in the main menu.

2- Press "**P** ∧" or "**P** ∨" button to select a menu title, then press "◀" or "▶" button to enter the menu.

• To exit a menu, press **"STANDARD"** button.
• To go to the previous menu, press **"MENU"** button.

Sound Menu

To change sound settings

• Press "**MENU**" button, now you are in main menu. In the main menu, select **SOUND** using "**P** ∧" or "**P** ∨" button, then enter the sound menu pressing "◀" or "▶" button.

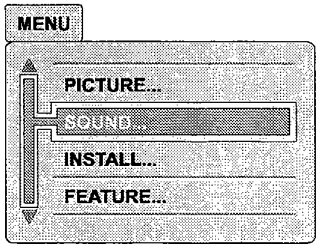

Setting Volume:

Using "**P** ∧" or "**P** ∨" button to select Volume.

• Press "▶" button to increase volume.
• Press "◀" button to decrease volume.

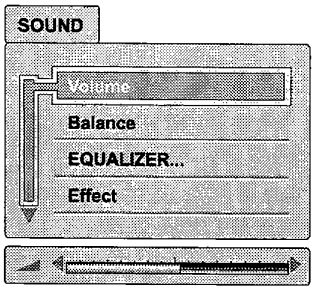

Setting Balance:

- Using "**P** ∧" or "**P** ∨" button select Balance.
- Press "▶" button to change balance rightward.
- Press "◀" button to change balance leftward.

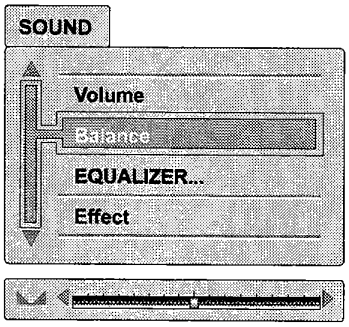

Equalizer

You can enter Equalizer menu by using "◀" or "▶" button after selecting this item in sound menu.

You can also select between the following modes: **Flat, pop, rock, jazz, classic** and **user using the** "◀" or "▶" button. When you come to user, press "▶" button to select the 120Hz item first. Using "**P** ∧" or "**P** ∨" button adjust the level and then press "▶" button to adjust the levels of other frequencies. When you press menu or standard button, the changes will be stored in the user item automatically.

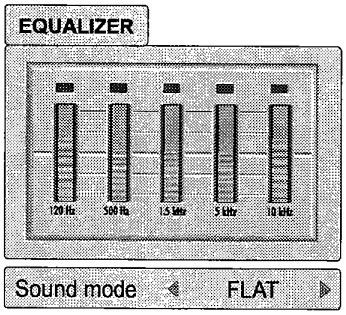

Effect:

You can use this feature to switch on and off sound effect. Pressing "◀" or "▶" button will turn on and off this feature. If the current sound system is **MONO** and the sound effect is set **ON**, then the sound will be heard as if it is **STEREO**. If the current sound system is **STEREO**, switching this effect on will make the sound deeper. Switching it off will make no change in **MONO** and **STEREO**.

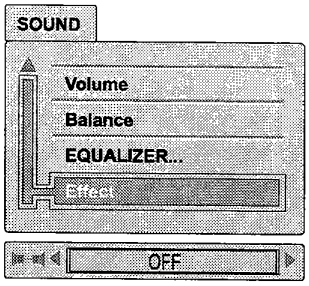

Picture Menu

To change picture settings:

- Press "**MENU**" button, now you are in main menu. In the main menu, select **PICTURE** using "**P** ∧" or "**P** ∨" button, then enter the picture menu pressing "◀" or "▶" button.

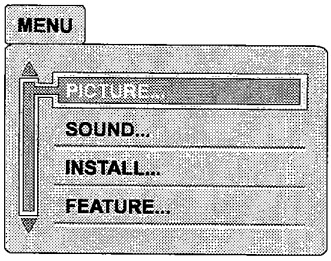

You can change the values of this items firstly by selecting the item by "**P** ∧" or "**P** ∨" button and then by using "◀" or "▶" button. The **PICTURE** menu disappears and level indicators are displayed while items are changed. The **PICTURE** menu is restored after adjustment is finished.

- You can change the **Brightness** by "◀" or "▶" button after selecting this item.
- You can change the **Contrast** by "◀" or "▶" button after selecting this item.
- You can change the **Colour** by "◀" or "▶" button after selecting this item.
- You can change the **Sharpness** by "◀" or "▶" button after selecting this item.
- You can adjust the **Tint** item as normal, warm and cool. Using "◀" or "▶" button toggle between these three settings.

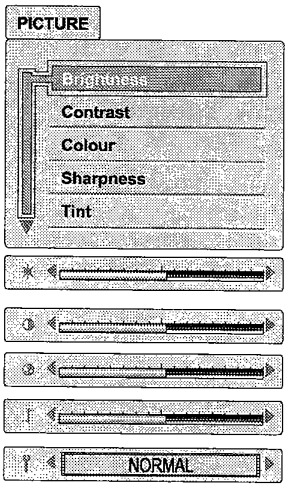

• The **Noise reduction** can be adjusted in four different levels: **Minumum, Medium, Maximum** and **Auto**. Additionally it can be cancelled by selecting the **OFF** option. Pressing "◀" or "▶" button toggles between these five settings.

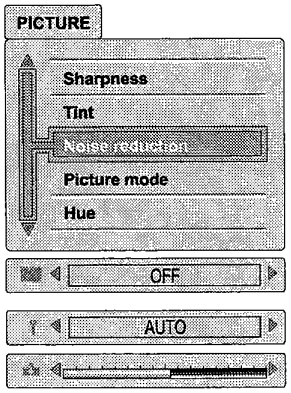

• The **Picture Mode** can be three different modes: Auto, 4:3 or 16:9 modes. Using "◀" or "▶" button toggle between these different screen formats.

The Picture Mode can be stored for all channels (200 channels) individually.

• You can change the **Hue** for **NTSC** systems by "◀" or "▶" button after selecting this item. A level indicator for Hue is displayed while changing this item. The Hue bar is displayed while an NTSC signal is input from the **EXT 1, EXT 2** or **F AV (Front AV)** terminal.

Recalling Factory settings.

You can re-set the current **PICTURE** menu settings (except **Noise reduction, Picture Mode** and **Tint** settings) to the default settings.

• Press "**STANDARD**" button when no menu appears.

Feature Menu

• Press "**MENU**" button, now you are in main menu. In the main menu, select **FEATURE**, using "**P** ∧" or "**P** ∨" button. Then enter the feature menu pressing "◀" or "▶" button.

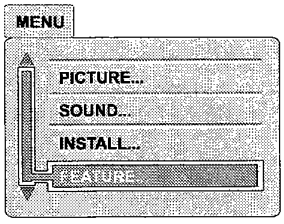

Sleep timer

The sleep timer is used to turn the TV off after a defined period. Press "◀" or "▶" button to choose a priod of time after selecting this item. The timer can be programmed between Off and 120 minutes in steps of 10 minutes. One minute before the "**Sleep timer**" function turns the TV off, the remaining time will be displayed.

Child lock

You can disable the control panel buttons (except the **POWER** button) with this item.

Press "◀" or "▶" button to change the setting to **ON** or **OFF** after selecting this item.

When you set this item to ON, the TV can be operated only by using the remote control handset.

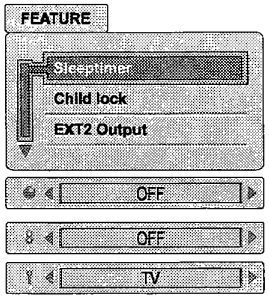

Setting External Source Output

• You can use this menu to select the internal or external source that will be output at **EXT 2** terminal.

• In the "**FEATURE**" menu select "**EXT2 Output**" using "**P** ∧" or "**P** ∨" button. Then select the source you want to be output at **EXT 2** pressing "◀" or "▶" button (one of the sources: **TV, EXT 1** or **F AV (Front AV)**.

Installation Menu

• Press "**MENU**" button, now you are in main menu. In the main menu, select **INSTALL**, using "**P** ∧" or "**P** ∨" button. Then enter the **INSTALL** menu pressing "◀" or "▶" button.

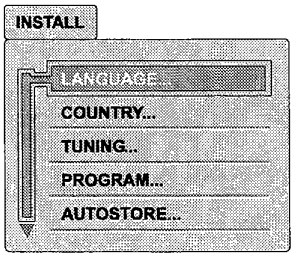

Menu Language Selection

Press the "**P** ∧" or "**P** ∨" button to select **"LANGUAGE"** item.

Press "◀" or "▶" button to enter **"LANGUAGE"** sub-menu.

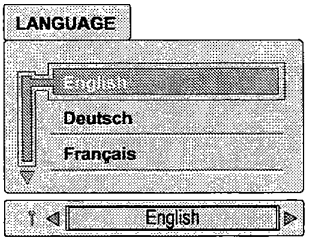

Press "**P** ∧" or "**P** ∨" button to select the desired menu language:

• After selecting the menu language press "◀" or "▶" button to store the selected language.

• Press **MENU** button to the upper menu or press **STANDARD** button to turn the menu off.

Country Selection

• Press the "**P** ∧" or "**P** ∨" button to select the **"COUNTRY"** item.

• Press "◀" or "▶" button to enter the **"COUNTRY"** sub-menu.

- Press "**P** ∧" or "**P** ∨" button to select the desired country settings:
- After selecting the country, press the "◀" or "▶" button to store the selected country.
- Press **MENU** key to go to the upper menu or press the **STANDARD** button to turn the menu off.

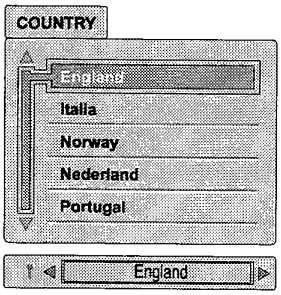

Tuning Menu

You can store a channel manually, or modify the current settings of a channel (for example, changing the channel name).

If you want to modify the current settings of a channel, select the channel of which you want to modify the setting. Then display the main menu on the screen.

- Press "**P** ∧" or "**P** ∨" button to select "**TUNING**" item.
- Press "◀" or "▶" button to enter the "**TUNING**" sub-menu.

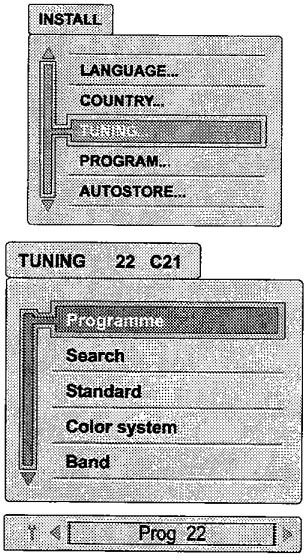

1. Press "**P** ∧" or "**P** ∨" button to select an item in the "**TUNING**" menu. Then press "◀" or "▶" button to change the setting. For details of each item, see the explanations below.
2. After all settings of a channel are completed, press "**P** ∧" or "**P** ∨" button to select "**Programme**" item. Then press "◀" or "▶" button to select a programme number which you want to store the setting.

3. Press "**P** ∧" or "**P** ∨" button to select "**Store**" item. Then press "◀" or "▶" button to store the setting.

   The "**STORED**" appears at the bottom of the menu for 3 second.

4. Press the **MENU** button to go to the upper menu, or press the "**Standard**" button to turn the menu off.

   In an AV mode, you can change only the "**Mode**" / "**Colour system**" setting.

Search:

You can search a channel manually.

- Select "**Search**" item. Then press "◀" or "▶" button to start searching. "**SEARCHING**" is displayed while the TV is searching a channel.
- Searching stops when the TV finds a channel. Then the channel is displayed.
- Press "◀" or "▶" button repeatedly until the channel you want appears.
- When you cannot search a channel you want, select the "**Standard**" item and select other broadcasting system. Then start searching again.

Standard:

- If you cannot hear the normal sound even when the picture appears normally, select the correct broadcasting system to hear the sound normally.
- Select "**Standard**" item. Then press "◀" or "▶" button to select a broadcasting system.

Colour system:

- If the picture is not clear or no colour appears, select the correct colour system to display the picture normally.
- Select "**Colour system**" item. Then press "◀" or "▶" button to select a colour system.
- The "**Colour system**" setting is fixed to "**AUTO**" when the "**Standard**" setting is "**L(L')**".

Band, Channel:

- If you know a channel number, you can find it directly by entering the channel number.
- Select the "**Band**" item. Then press "◀" or "▶" button to select the band (**C** or **S**) where the channel you want is located.



- Select the "**Channel**" item. Then press "◀" or "▶" button to select the channel number, or enter the channel number with the digit buttons.
- The available channel numbers differ depending on your "**COUNTRY**" and "**Standard**" settings.



Fine tuning:

If the channel reception is poor, fine-tune the channel.

- Select "**Fine tuning**" item. Then press "◀" or "▶" button to fine -tune the channel.

Name:

You can store the channel name or change it.

- Select "**Name**" item. Then press "◀" or "▶" button to display a cursor.
- Press "**P** ∧" or "**P** ∨" button to select a character and press "◀" or "▶" button to move the cursor.
- After the name is completed, press the **MENU** button.

Mode:

Set "**Mode**" item to "**TV**" for the TV channels.

- When you watch a picture from your VCR and the picture is unstable, you may improve it by changing the "**Mode**" setting from "**TV**" to "**VCR**".



Program Menu

In order to edit the program list you should enter **PROGRAM** menu.
Select **PROGRAM** item in the **INSTALL** menu, then press "◀" or "▶" button to enter the **PROGRAM** menu. You can change and delete the programs on the list, according to your order preference. The following menu will appear:
You can select the programs in the program list by pressing "**P** ∧" , "**P** ∨" or "◀" , "▶" button on the remote control. Whenever you select a program from the list, colour of the selected program item will change and this program will be displayed on the screen.

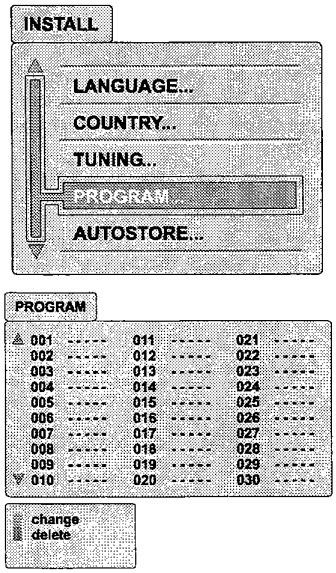

Change

First select the program you want to change by using "**P** ∧" , "**P** ∨" or "◀" , "▶" buttons as described above for move item.
Press **Blue** button, colour of program name in the list you preselected become blue.
Now using "**P** ∧" , "**P** ∨" or "◀" , "▶" button select the second program in the list which you want to exchange with the previously selected program.
Press **Blue** button again, so the previously and the second selected program will be exchanged.

Delete

First select the program you want to delete by using "**P** ∧" , "**P** ∨" or "◀" , "▶" button. After program is selected press **Red** button.

The selected program will be removed from the program list and the list will shift one step upwards at the position of deleted program.

Autostore Menu

- After the **MENU** language and Country selections, the **AUTOSTORE** function is ready to start. Select the **AUTOSTORE** item in the **INSTALL** menu, then press "◀" or "▶" button to enter the **AUTOSTORE** menu.

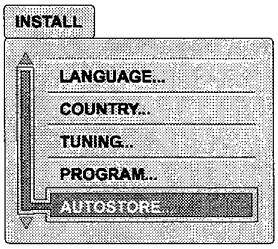

- A warning message "***All prestored programmes will be erased!***" appears in a message box.

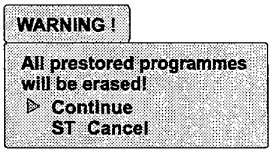

- To start **AUTOSTORE** press "▶" button. Firstly all programs will be cleared. Then Preset installation will take place storing the available channels. Finally the sorting order of programs which depends on selected country and menu language settings will start.
- To cancel **AUTOSTORE** press **STANDARD** button. The operation will be cancelled and TV will restore to normal operation mode.

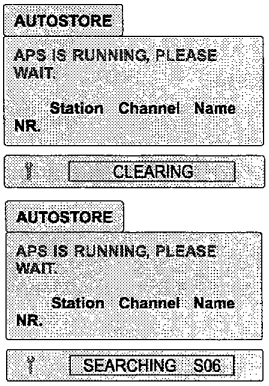

- After the **AUTOSTORE** function is finalized, "**PROGRAM**" menu appears.

Other Features

Sound Mute

To cut off the sound of the TV press "🔇" button. The sound will be cut off. To cancel mute, press "🔇" or "🔊" or "🔊" button. The volume level will be the same as the level before mute if you cancel mute pressing "🔇" button again.

Stereo / Bilingual

- If the TV channel you are watching broadcasts in two languages (e.g. Eurosport), you can select the dubbed or the original language, pressing the "DUAL" button.
- When the stereo broadcast is received poorly, you can change from stereo to mono sound so that you can hear the broadcast more clearly and easily.

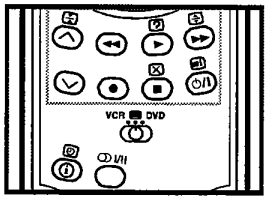

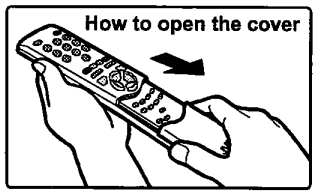

Information on Screen

First pressing the "ⓘ" button displays the current status "**Programme number**", "**Station name**" and "**Sound status**".

Pressing this button again displays the current time.

Pressing this button once more remove the on-screen display.

To Display the Time

- While watching a TV programme with Teletext transmission press "ⓘ" button twice. The current time information, captured from Teletext will be displayed at the upper left corner of the screen.
- If the programme being watched does not have Teletext transmission, no time information will be displayed.
- The time information will disappear after pressing "ⓘ" button again.

Standard

You can re-set the current **PICTURE** menu settings (except **Noise reduction, Picture Mode** and **Tint** settings) to the default settings.

- Press "**STANDARD**" button when no menu appears.

VCR / DVD Control Buttons and VCR / ☰ / DVD Switch

The buttons can be used to operate a JVC brand VCR or DVD player. Pressing the button having the same appearance as the original remote control button of a device makes the function work in the same way as the original remote control.

1. Set the VCR / ☰ / DVD Switch to the VCR or DVD position.

VCR:

When you are operating the VCR, set the switch to the VCR position.

DVD:

When you are operating the DVD player, set the switch to the DVD position.

☰ (Text):

When you are viewing Teletext programmes, set the switch to the ☰ (Text) position.

2. Press the VCR / DVD Control Button to control your VCR or DVD player.

Note:

- If your device is not made by JVC, these buttons cannot be used.
- Even if your device is made by JVC, some of these buttons or any one of the buttons may not work, depending on the device.
- You can use the ∧ / ∨ buttons to choose a TV channel which the VCR will receive or choose the chapter which the DVD player plays back.
- Some DVD player models use the ∧ / ∨ buttons for operating of Fast forward/backward functions and choosing the chapter. In this case, the ◄◄ / ►► the buttons do not work.

Teletext

Teletext is an information system that displays text on your TV screen. Using the Teletext information system you can view a page of information on a subject that is available in the list of contents (index).

No on screen display will be available in text mode.

While no teletext information available in the selected programme, if you press (teletext) "☰" button,'No Teletext Transmission' warning appears at the center of the screen.

No contrast, brightness or colour control, but volume control is available in text mode.

To operate Teletext

- Select a TV station on which Teletext is being transmitted.
- Press (teletext) "☰" button. Usually the list of contents (index) is displayed on the screen.
- Set the VCR / ☰ / DVD switch to the ☰ (Text) position.

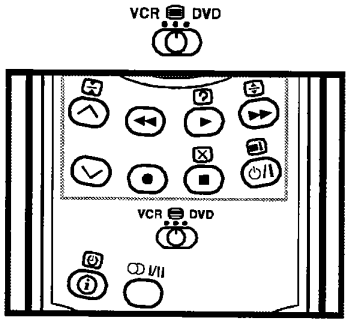

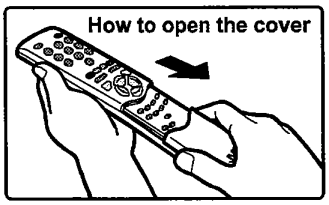

To select a page of Teletext

- Press the appropriate digit buttons for the required Teletext page number.

The selected page number is displayed at the top left corner of the screen. The Teletext page counter searches until the selected page number is located, so that the desired page is displayed on the screen.

- Press "**P** ∧" button to move the Teletext screen forward one page at a time.
- Press "**P** ∨" button to move the Teletext screen backward one page at a time.

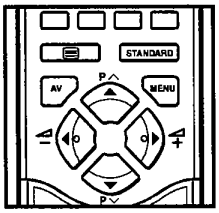

To Select Index Page

- To select the page number of the index (generally page 100), press "⊟" button.

Searching for a teletext page while watching TV

- In the Teletext mode pressing "⊠" button will switch the screen to the TV mode. In the TV mode enter a page number using digit buttons. As you enter last digit of page number, "☰" sign will replace the page number and flash until the entered page number is found. Then the page number will replace "☰" sign again. Now you can display this teletext page pressing "⊠" button.

To Select Double Height Text

- Press "⊕" button for the top half of the information page to be displayed in double height text.
- Press "⊕" button again for the bottom half of the information page to be displayed in double height text.
- Press "⊕" button once more for the full page of normal height text.

To Reveal "concealed" Information

- Pressing "?" button once will reveal answers on a quiz or games page.
- Pressing "?" button again will conceal the revealed answers.

To Stop Automatic Page Change

The teletext page you have selected may contain more information than what is on the screen; the rest of the information will be displayed after a period of time.

- Press "⊕" button to stop the automatic page change.
- Press "⊕" button again to allow the next page to be displayed.

To Select a Subcode Page

Subcode pages are subsections of long Teletext pages that can only be displayed on the screen one section at a time.

- Select the required Teletext page.
- Press "◴" button.
- Select the required subcode page number by pressing four digit buttons (e.g. 0001).
- If the selected subcode page is not displayed in a short time, press "⊠" button. TV programme will be displayed on the screen.
- Teletext page number will be displayed on the upper left corner of the screen when the selected page is found.
- Press "⊠" button to display the selected Teletext page.

To exit Teletext

- Press "☰" button. The screen will switch to TV mode.

Fastext and Toptext

Teletext mode will be selected according to transmission automatically.

Your CTV supports the 8 page Teletext system. When the page number of any of the 8 pages in memory is entered, the system will not search for the requested page; instead it will display the page automatically.

- Press "**P** ∧" button to move the Teletext screen forward one page at a time.
- Press "**P** ∨" button to move the Teletext screen backward one page at a time.

For Fastext and Toptext

The subject-heading for the information may have a particular colour or can be in a form located in a coloured box.

- Press an appropriate **RED, GREEN, YELLOW** or **BLUE** button in order to reach the relevant page quickly.

For TOPTEXT

If Toptext transmission is present, colour coded buttons will appear in status row.

If Toptext transmission is not present, status row will not appear.

In Toptext mode the "**P** ∧" or "**P** ∨" commands will request the next or previous page respectively. If Toptext transmission is not available, in case of operation of these commands, wraparound occurs. For example page 100 appears to be one greater than page 199.

Connect the External Equipments

Before connecting anything

- Switch off all equipments including the TV.
- Read the manuals provided with the equipments.

To select an AV mode

Pressing "**AV**" button on the remote control selects one of four AV modes (**EXT 1, EXT 2, EXT 2 S** and **F AV**).

- To return to the **TV** mode, repeatedly press "**AV**" button.

EXT 1 terminal: Euroconnector (21-pin, SCART)

- Video input, Audio L/R inputs and RGB inputs are available.
- TV broadcast outputs (Video and Audio L/R) are available.

EXT 2 terminal: Euroconnector (21-pin, SCART)

- Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available.
- Video and Audio L/R outputs are available. (see "**Setting External Source Output**" on **page 7**.)

F AV (Front AV) terminal: RCA connectors x 3

- Video input and Audio L/R inputs are available.

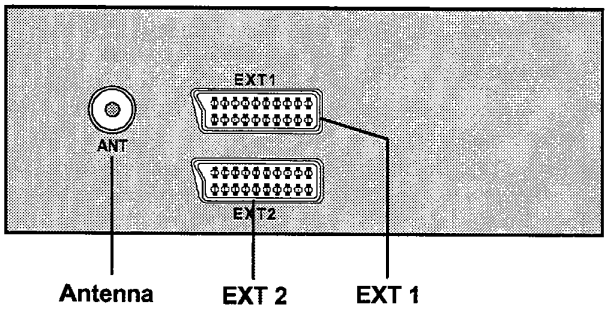

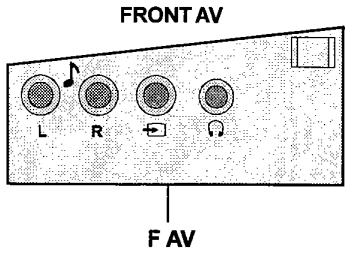

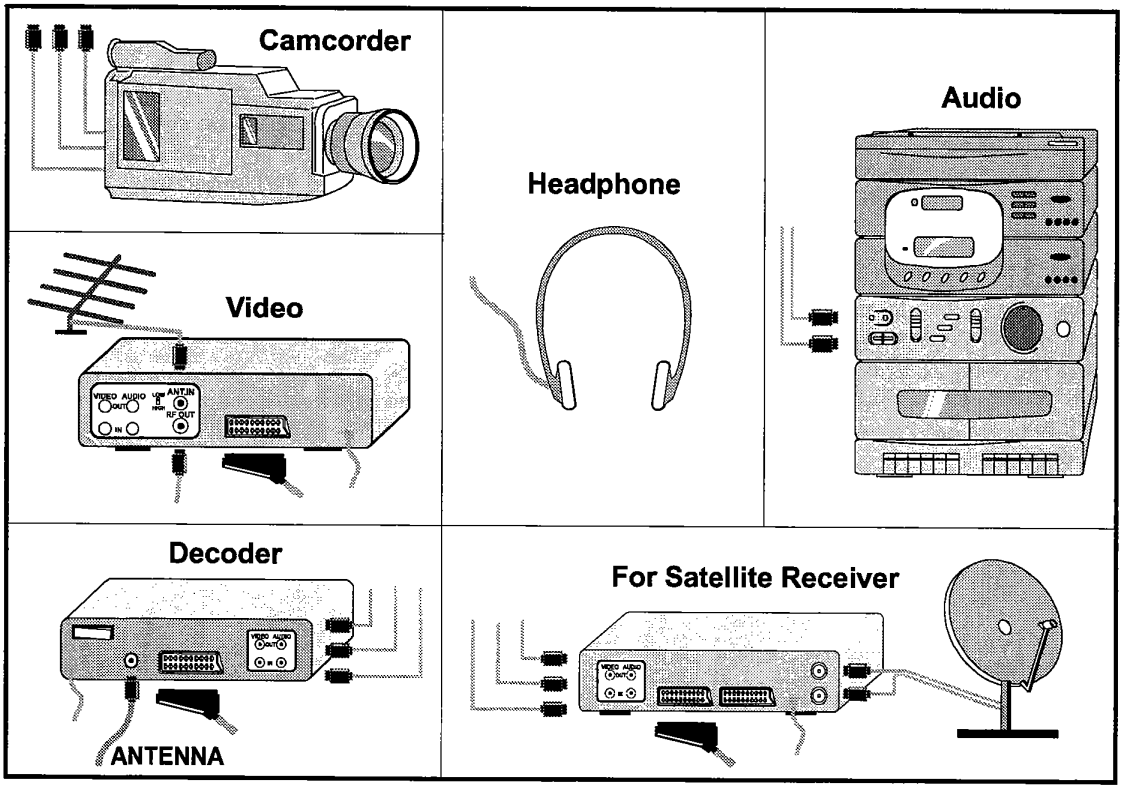

Via the Euroconnector

Your TV set has two Euroconnector sockets. If you want to connect equipments (e.g. video recorder, decoder, etc.) which have Euroconnectors, to your TV, use the **EXT 1** or **EXT 2** terminals.

EXT 2 S Mode

If the equipment connected to your TV set supports S-Video (Y/C) output from Euroconnector, you can have a better picture quality by selecting **EXT 2 S** mode and connecting your equipment to the **EXT 2** terminal of TV. See your equipment's booklet to check if your equipment has such feature.

Via the RCA jacks

If you have an equipment (such as a Camcorder) which has the RCA jacks, connect it to the **F AV (Front AV)** terminal with the video and audio cables.

- If the epuipment has the mono audio jack, connect it to the **AUDIO-L** jack.

Via the ANT (aerial) socket

If your equipment does not have a Euroconnecter or RCA jacks, connect it to the TV with an aerial cable. For details, see the manual provided with the equipment.

- To store the test signal that comes from the equipment in a programme number, follow the instructions of "**Tuning menu**" on **page 8**. The programme number 0 is usually used for the external equipment.
- After storing, you can watch images from the equipment by selecting the programme number which you stored the test signal.

TV and Video Recoder (VCR)

- Connect the Video Recorder to the ANT (antenna input) socket of the TV with the aerial cable.
- Connect the Video Recorder to the **EXT 1** or **EXT 2** terminal with the SCART cable, or connect it to the **F AV (Front AV)** terminal with the audio and video cables.
- When you watch a picture from your VCR and the picture is unstable, you may improve it by changing the "**Mode**" setting in the "**TUNING**" menu. (See the "**Tuning Menu**" on **page 8**.)

NTSC Playback

Connect a **NTSC** video recorder to a terminal. Then press "**AV**" button to select the corresponding AV mode.

NTSC 3.58/4.43 system is detected automatically in AV mode.

Copy Facility

You can output the video and audio signals which inputs from **TV, EXT 1, F AV (Front-AV)** terminal to the video recorder connected to the **EXT2** terminal.

- To select the output source, see "**Setting External Source Output** " on **page 7**.

Connecting Headphones

Use the stereo headphone socket of your TV, to connect headphones. As soon as you connect your headphone to the headphone socket, TV's loudspeakers will automatically mute.

Tips

Care of the Screen

Clean the screen with a slightly damp, soft cloth. Do not use abrasive solvents as they may damage the TV screen coating layer.

Poor Picture

Have you selected the correct TV system? Is your TV set or house aerial located too close to the loudspeakers, non-earthed audio equipment or neon lights, etc. ?

Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.

The picture quality may degrade when two peripherals are connected to the TV at the same time. In such a case, disconnect one of the peripherals.

No Picture

Is the aerial connected properly? Are the plugs connected tightly to the aerial socket? Is the aerial cable damaged? Are suitable plugs used to connect the aerial? If you are in doubt, consult your dealer.

No Picture means that your TV is not receiving any transmission. Have you pressed the correct buttons on the remote control? Try once more.

Sound

Sound is coming from only one of the speakers. Is the balance set to one direction extreme? See **SOUND** menu.

Remote Control

Your TV no longer responds to the remote control. Press the "**STANDARD**" button on the remote control once more. Perhaps the batteries are exhausted. If so you can still use the local buttons at the front of your TV.

Have you selected the wrong menu? Press "**STANDARD**" button to return to TV mode or press "**MENU**" button to return to the previous menu.

No solution

Switch your TV set off and on. If this does not work, call the service personnel; never attempt to repair it yourself.

Specifications

TV BROADCASTING	**PAL SECAM B/G L**
RECEIVING CHANNELS	VHF (BAND I/III) UHF (BAND U) HYPERBAND CABLE TV (**B/G:** S01-S41 / S75-S79 ; **L:** S01-S41 / S75-S77)
NUMBER OF PRESET CHANNELS	200
CHANNEL INDICATOR	On Screen Display
RF AERIAL INPUT	75 Ohm (unbalanced)
OPERATING VOLTAGE	**220-240V AC, 50 Hz.**
SOUND-MULTIPLEX SYSTEMS	Nicam + German Stereo
PICTURE TUBE	**For 28"**
AUDIO OUTPUT POWER ($W_{RMS.}$) (%10 THD)	2 x 12
POWER CONSUMPTION (W) (max.)	175

DIMENSIONS (mm)	**AV-28BH8EPB** **AV-28BH8EPS**
D	480
L	770
H	580
Weight (Kg.)	33,2